


HOW TO EXPORT A PDF FROM QUARK 7, 8, & 9

NOTICE: We have noticed color shifts when moving from an older version of Quark to Quark 7. To minimize this we ask all customers with Quark 7 to change the Color Management Settings by going to the Preferences under QuarkXpress and selecting Color Management and changing the Source setup to **QuarkXpress Emulate Legacy**.



Create a new Output Style for Exporting PDFs by navigating to Edit then down to Edit Output Styles. Then choose New - PDF.

Name the PDF Style (we used JPA Export)

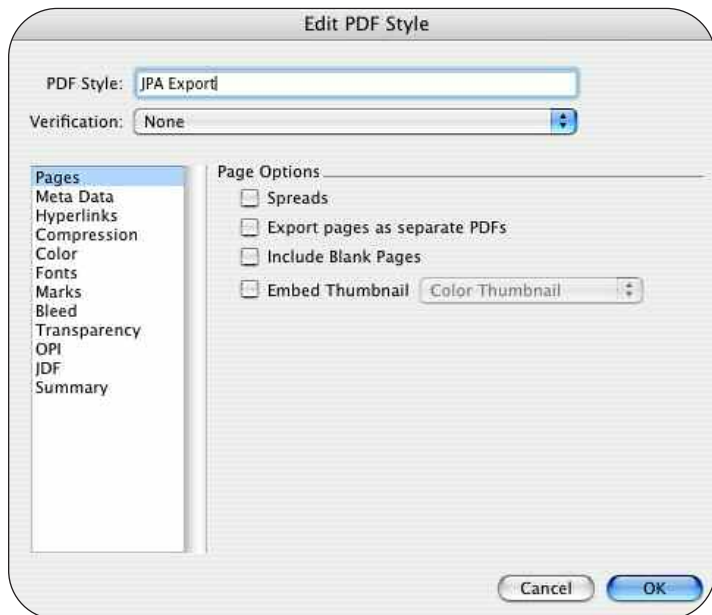


Now continue down the left side changing options to JPA specifications

Pages - all page options should be unchecked

Meta Data - You may type anything you want here or leave it all blank

Hyperlinks - Include Hyperlinks should be unchecked

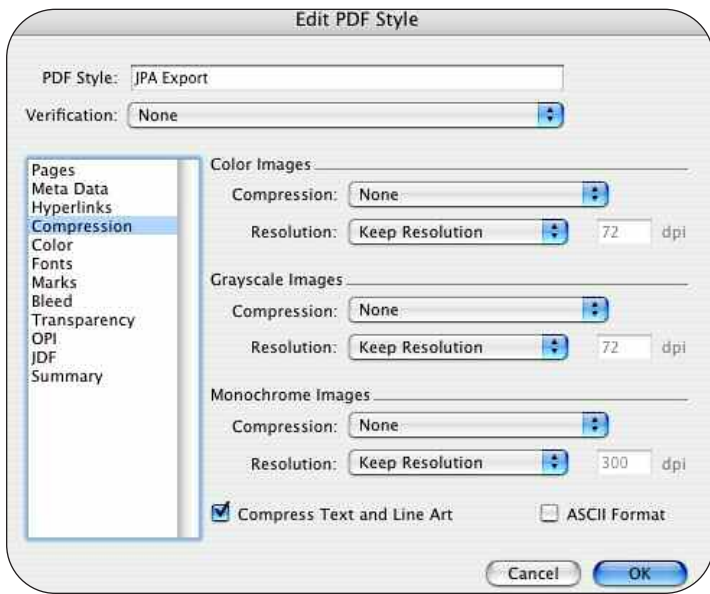


Compression:
Color Image
Compression: NONE
Resolution: Keep Resolution

Grayscale Images
Compression: NONE
Resolution: Keep Resolution


Monochrome Images
Compression: NONE
Resolution: Keep Resolution

Compress Text and Line Art - Checked


ASCII Format - Unchecked

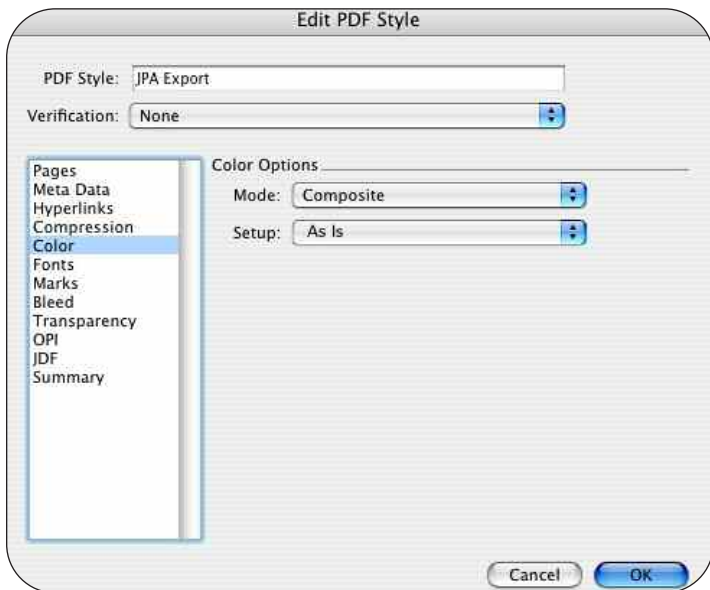

Color:
Mode: Composite
Setup: As Is

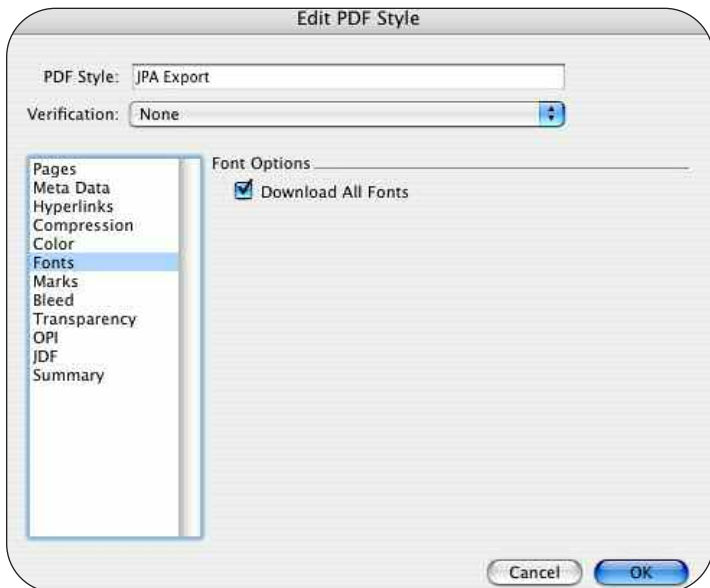

Fonts:
Download All Fonts: Checked

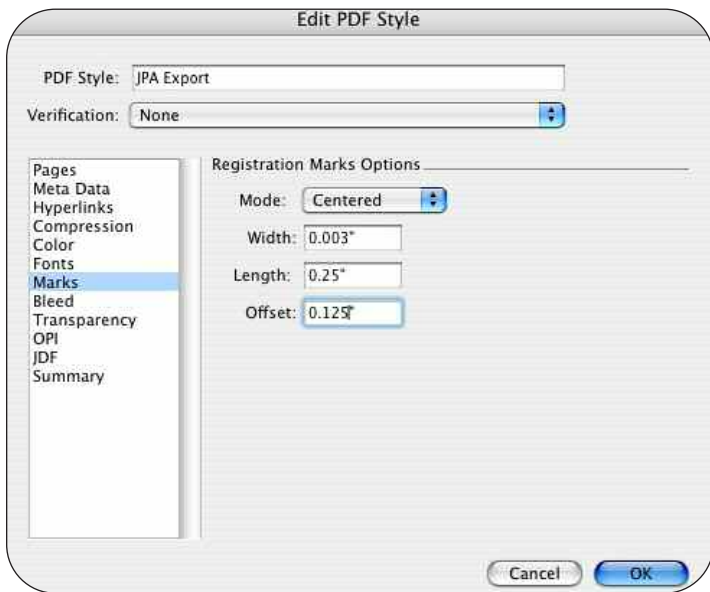


Marks:

Mode: Centered

Width: .003”

Length: 0.25”

Offset: 0.125”

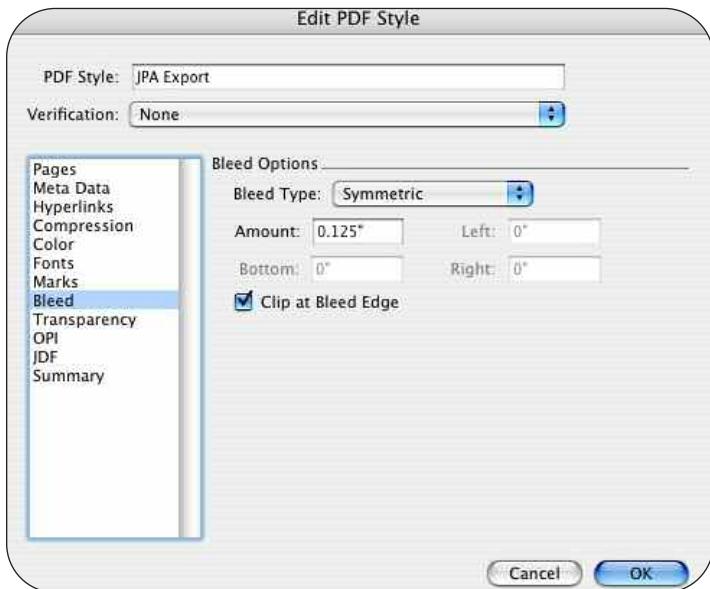


Bleed:

Bleed Type: Symmetric


Amount: 0.125”


Clip at Bleed Edge: Checked

QuarkXpress 7 & 8 Transparency Settings

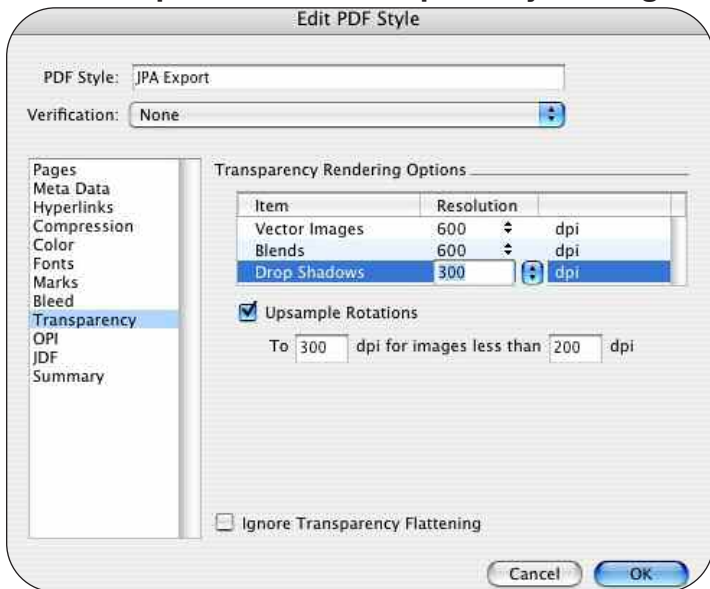

QuarkXpress 9 Transparency Settings

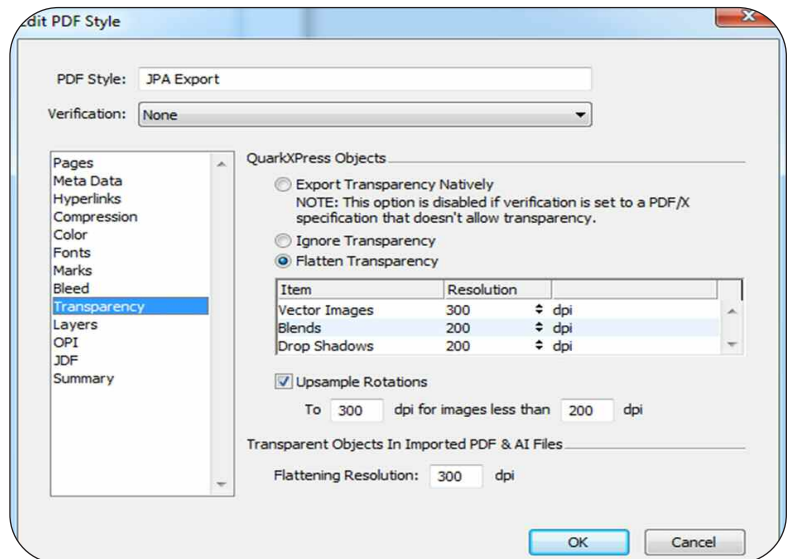

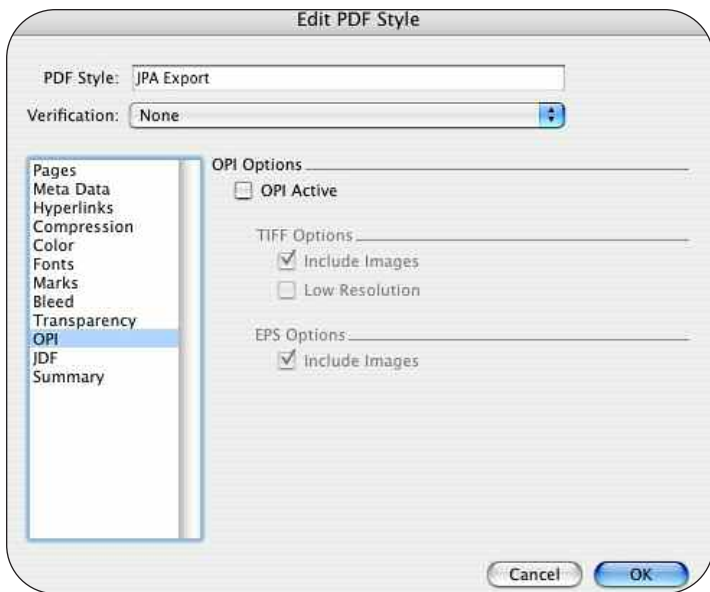


OPI:

OPI Active: Unchecked

JDF:

Output JDF: Unchecked

Once all settings have been changed click OK and then Save at the output style window.

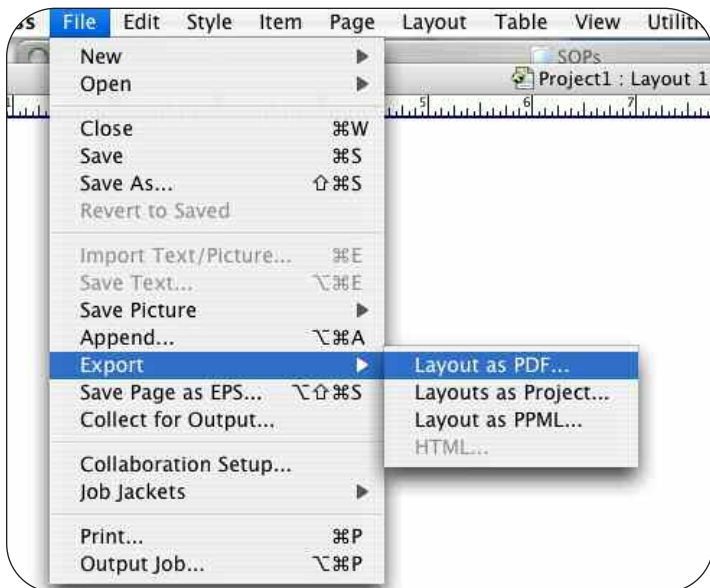

To export a pdf go to File - Export - Layout as PDF



Give your file a name, select the location, and type in the page range you want to include in your PDF. Then select the PDF Style that was just created (JPA Export) and press Save. Continue with all remaining pages until all pages have been exported to PDFs.